

Q-Eco Rapid Descaler

Foaming Limescale Remover

For kitchen & Washrooms – Fragrance Free

USES

Removes hard water marks and dissolves limescale.

Ideal for surfaces that are exposed to water in washrooms and kitchens

Use every day for a brilliant shine. Ideal for use on taps, sinks, worktops, toilets, urinals, showers and tiles

DIRECTIONS

Apply to the surfaces.

Leave for up to 2 minutes then agitate and rinse away well for a sparkling, streak free finish.

 
 
DO NOT USE on ENAMEL, MARBLE, LIMESTONE.

DO NOT USE on acid sensitive surfaces.

DO NOT USE on scratched or damaged surfaces.

DILUTIONS

Use undiluted

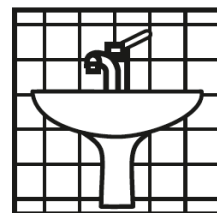

COMPLEX